





TEA CUP CLOCK RADIO WITH NIGHT LIGHT



OWNER'S MANUAL
KT2055

SAFETY INSTRUCTIONS

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (ON BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of Important Instructions accompanying the product.</p>
--	---	---

IMPORTANT SAFETY INSTRUCTIONS

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Attachment - Do not use attachment not recommended by the product manufacturer as they may cause hazards.
5. Water and Moisture - The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Power - Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance.
9. Non use Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

WELCOME TO THE WORLD OF HELLO KITTY

We have taken great care to make sure that your Clock Radio was in perfect working order when it left our factory. It has been designed to give you many years of enjoyment and trouble free operation. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years.

For future reference, record the serial number in the space provided.

Model Number: KT2055

Serial Number : _____

IMPORTANT NOTES

Avoid installing the unit in locations described below :

- Places exposed to direct sunlight or close to heat radiation appliances such as electric heaters.
- Dusty places.
- Places subject to constant vibration.
- Humid or moist places.

POWER SOURCE

This radio is designed to operate on an AC-AC adaptor with a rating of AC 10V 300mA. Do not attempt to operate the radio on any other power source. You could cause damage to the radio that is not covered by your warranty.

This AC-AC adaptor of this radio should be connected to an AC outlet that is always 'live'. Do not connect the AC-AC adaptor to an outlet that is controlled by a wall switch. When the power to the radio is interrupted, the Sure Alarm battery back up system takes over to maintain the time and alarm setting. To maximize the life of the back up battery, keep the radio connected to a 'live' AC outlet at all times.

PREPARATION FOR USE

UNPACKING AND SET UP

- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your clock radio on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the AC power cord of the AC-AC adaptor and extend it to its full length. The FM antenna is built in to this cord. It must be fully extended to provide the best FM reception.

 
SURE-ALARM BATTERY BACK UP SYSTEM

The Sure-Alarm battery back up system in this clock radio will maintain the time and alarm settings in the event of a temporary power interruption. When the AC power is restored the time and alarm settings will be correct. If the AC power is off at your wake up time, the Sure-Alarm system will use the battery power to turn on the radio or buzzer alarm as usual, as long as the back up battery is installed and has sufficient power remaining.

The Sure-Alarm battery back up system requires one 9-volt battery, not included. We recommend that you install an alkaline battery for longest life and best performance.


To install the battery

- Open the battery compartment cover on the bottom of the radio by pressing the tab in the direction of the arrow.

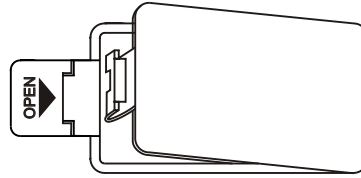

- Connect the 9-volt battery to the battery clip. It can only be connected one way.

 - Push the battery into the battery compartment and replace the cover.

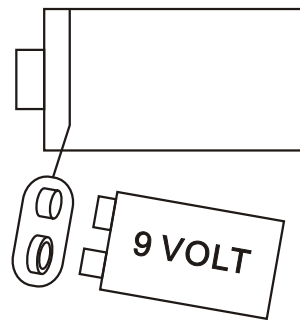


POWER FAILURE INDICATOR

If no battery is installed in the radio, or if the battery in the compartment is weak or dead, the time and alarm settings will be lost if the power is interrupted. When the AC power is restored the clock display will begin flashing. This indicates that the time display is incorrect and needs to be reset.

IMPORTANT :

After you reset the time, be sure to reset your alarm settings as well

 LOCATION OF CONTROLS AND INDICATORS

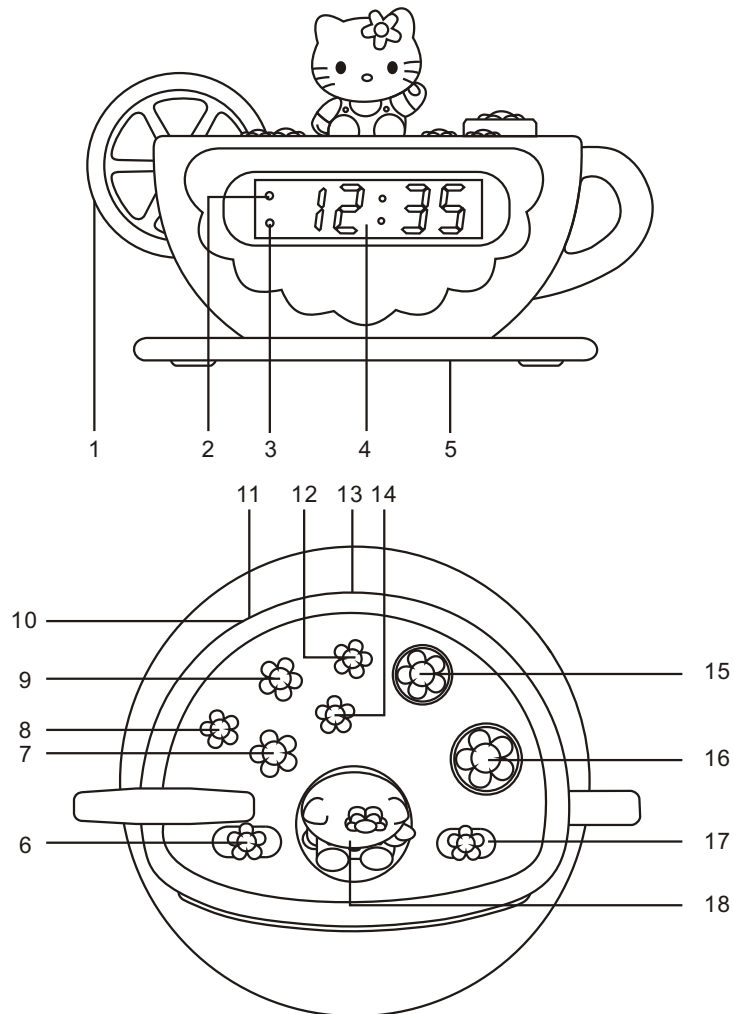

- | | |
|---|--|
| 1. Night Light. | 9. TIME Adjustment Button. |
| 2. AM Indicator. | 10. AC Input Jack. (At unit back) |
| 3. ALM(Alarm) 'ON' Indicator. | 11. LIGHT (ON/OFF) Switch. |
| 4. LED Clock Display. | 12. HOUR Button. |
| 5. Battery Compartment.
(At bottom of cabinet) | 13. Speaker. (At rear cabinet) |
| 6. ALARM Selector Switch.
(OFF/ON/AUTO/BUZZER) | 14. MIN. (Minute) Button. |
| 7. ALARM RESET Button.
(Alarm Time Adjustment) | 15. VOLUME Control. |
| 8. SLEEP Button. | 16. TUNING Control. |
| | 17. BAND (AM/FM) Selector Switch. |
| | 18. SNOOZE Button.
(Hello Kitty Doll) |

OPERATING INSTRUCTIONS

POWER CONNECTION

1. Insert the plug, at the end of the AC adaptor cord into the AC input jack, at the back of the unit.
2. Plug the AC adaptor into a 230 ~ 50Hz AC power outlet socket.

SETTING THE CLOCK

When you connect the radio to your AC outlet for the first time the clock display will begin flashing "12:00". The flashing will stop when you set the time.

1. Depress the TIME button and the HOUR button to set the correct Hour.
2. Depress the TIME button and the MIN button to set the correct Minute.



NOTE : Be sure to observe the AM indicator to make sure that the time is set correctly for AM or PM. If the AM indicator is 'On', the time displayed is "AM". If the AM indicator is 'Off', the time display is "PM".

SETTING THE WAKE UP TIMES

1. Depress the ALARM/RESET button and the HOUR button to set the correct wake up Hour.
2. Depress the ALARM/RESET button and the MIN button to set the correct wake up Minute.

NOTE : Be sure that you have set the wake up time correctly by observing the AM indicator. If the AM indicator is 'On', the wake up time is "AM". If the AM indicator is 'Off', the wake up time is "PM".

CHECKING THE WAKE UP TIMES

 
Whenever you want to check the wake up time, simply press ALARM/RESET button. The display will change from the correct time to the wake up time. Release the ALARM/RESET buttons to return to correct time.

LISTENING TO THE RADIO

1. Set the BAND selector to the desired band, AM or FM.
2. Set the VOLUME control to a low setting.
3. Slide the ALARM switch to the ON position.
4. Select your desired station with the TUNING control.
5. Adjust the VOLUME control to the desired setting.
6. When you are finished listening, slide the ALARM selector to OFF position to turn the radio 'Off'.

ANTENNA INFORMATION

AM - The AM bar antenna is inside the cabinet. If AM reception is weak, change the position of cabinet until the internal antenna picks up the strongest signal.

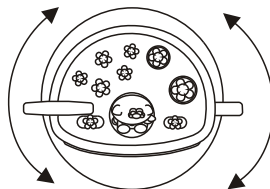

FM - The FM antenna is built in to the AC power cord. If FM reception is weak try varying the position and direction of the power cord until you find the strongest signal.

WAKE TO RADIO

1. Slide the ALARM selector to ON and select the band, station, and volume level that you wish to hear when the alarm comes 'On', then slide the ALARM selector to AUTO position
2. Reconfirm the wake up time settings by pressing the ALARM/RESET button.
3. At the selected wake up time the radio will turn 'On'. It will play for about two hours and then shut off automatically.
4. To stop the radio sooner, press the ALARM/RESET button. The radio will stop but the alarm remains set and will turn the radio on again at the same time on the following day.
5. If you do not want the alarm to turn the radio on the following day, set the ALARM selector to the 'OFF' position.

WAKE TO BUZZER

1. Set the ALARM selector to the BUZZER position. The ALM indicator will light up to confirm that the alarm is set.
2. At the selected wake up time the buzzer will sound. It will continue for about two hours and then shut off automatically.
3. To stop the buzzer sooner, press the ALARM/RESET button. The buzzer will stop but the alarm remains set and will turn the buzzer on again at the same time on the following day.
4. If you do not want the alarm to turn the buzzer on the following day, set the appropriate ALARM selector to the 'OFF' position.

SNOOZE ALARM

After the radio or buzzer alarm sounds in the morning you may press the SNOOZE button (Hello Kitty Doll) for a few more minutes sleep. The alarm will stop for approximately 9 minutes and then turn on again.

SLEEP TO MUSIC TIMER

You can program the sleep timer to play the radio for up to 1 hour 59 minutes and then shut off automatically.

1. Press the SLEEP button. The display will briefly show "0:59". While holding the SLEEP button, press the HOUR button, the display shows "1:59" and the radio will begin to play. After 1 hour 59 minutes the radio will shut off automatically.
2. To adjust the amount of time that the radio will play before shutting off, hold the SLEEP button. Then press the MIN (Minute) button to adjust the desired sleep time. When the desired amount of sleep time appears on the display, release the buttons.
3. To cancel the sleep timer before it counts down to "00" and shuts the radio "off", press the SNOOZE button (Hello Kitty Doll).

IMPORTANT:

Remember that the station and volume settings you choose for the "Sleep To Music" operation are the same settings you will hear if you set the alarm for "Wake To Radio" the following morning.

NIGHT LIGHT OPERATION

The "Lemon Slice" on the side of the tea cup also functions as a Mini Night Light to provide a soft, yet reassuring amber 'glow' on a desk or bedside table. Turn the Night Light 'On' or 'Off' with the slide switch located on the back of the cabinet.

NOTE : The long life LEDs inside the Night Light should last for the life of the clock radio. They are not consumer replaceable.

SPECIFICATIONS

POWER SOURCE :

AC Adaptor : Input 230V~50Hz
DC 9V (1x '006P' or equivalent) for clock backup

RADIO FREQUENCY :

AM: 520 - 1625 KHz
FM: 88 - 108 MHz

OUTPUT :

200 mW at 10% THD

SPEAKER :

2-1/4" 8 OHM

DIMENSION :

200 (W) X 132 (H) X 152 (D) mm

WEIGHT :

0.68Kg (not including battery)

MAINTENANCE

Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.



Producer:
FULLYART TECHNOLOGIES, LTD.



Un Produit :
SID - Cadeaux F / 9316 0
Noisy Le Grand



809-2055000-023R

Printed in China